



## Installation instructions

1. Put the assembly tool over the front end of the coupling.
2. Slip the Soft-Line protector on the assembly tool.

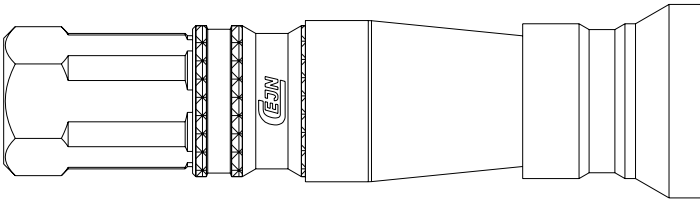

3. Move the Soft-Line protector over the assembly tool and the coupling. A drop of soapy water can be applied between the Soft-Line protector and the assembly tool to simplify assembly. Ensure that the waist of the Soft-Line protector ends up level with the waist of the locking sleeve. The Soft-Line protector is now assembled.

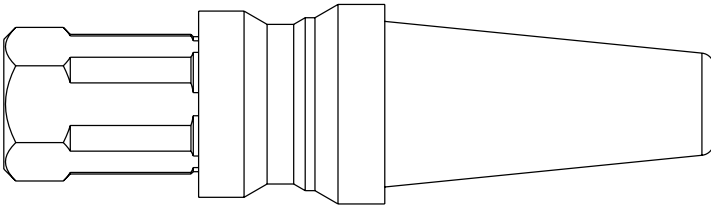

**Operating Instructions**  
**Soft-Line**  
**Cover**

09 000 8027

